


# INSTRUCTIONS 4" x 6" MIRROR INSTALLATION

INTRODUCTION: Satellite portable restrooms and accessories must be assembled according to approved assembly procedures. Variations in assembly could adversely affect product life and warranty.



P/N #11027  
RIVET, #66 ALUM

P/N #14474  
MIRROR, 4" X 6" STNLS STEEL

## HARDWARE

### Tools:

- DRILL ELEC/CORDLESS
- #10 (0.194") DRILL BIT
- RIVET GUN

## MAXIM 3000® INSTALLATION

(Install on inside of door frame section of hasp side panel- Location "A")


<p>1. Drill (2) # 10 (.194") or 5 mm holes using dimples for locations being careful to only drill through inside wall of panel.</p>	<p>2. Remove protective plastic film from mirror surface.</p>	<p>3. Rivet mirror to door frame using rivets supplied.</p>

(Install on inside of door- Location "B")

<p>1. Drill (2) # 10 (.194") or 5 mm holes [first hole 7.50" over from door feature as indicated by arrows, 62" from the floor to the top hole] being careful to only drill through inside wall of Door. Rivet mirror thru top hole, transfer drill bottom hole thru mirror and rivet bottom.</p>	

## TUFWAY® INSTALLATION

1. Position mirror on inside of door 1" under spring tube and centered on door side to side as shown.

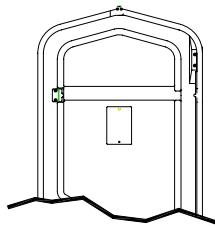

2. Using holes in mirror as a guide, drill (2) #10 (.194)[5mm] holes through inside wall only.  
NOTE: BE CAREFULL NOT TO DRILL THROUGH OUTSIDE WALL OF DOOR.
3. Remove protective plastic film from mirror surface.
4. Rivet mirror to door using rivets supplied.



SATELLITE INDUSTRIES, INC.  
2530 Xenium Lane North, Minneapolis, MN 55441  
Telephone: 763-553-1900 Fax: 763-553-1905  
800-328-3332 / www.satelliteindustries.com