


# INSTRUCTIONS FOR SLIMMATE II INSTALLATION

**INTRODUCTION:** Portable restrooms and accessories kits must be assembled according to approved assembly procedures. Avoid variations in assembly procedures could adversely affect product life and warranty.



**\*\*CAUTION:** The Slimmate II Handwash as well as any portable handwash unit should be cleaned and sanitized on a regular basis. **DO NOT DRINK THE WATER.**

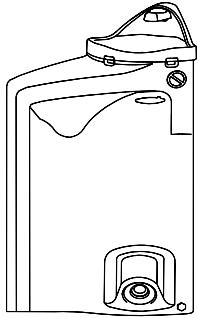


| 8      | 11368  | 1   | WASHER, 5/16 FLAT STNLS       |
|--------|--------|-----|-------------------------------|
| 7      | 11315  | 2   | WASHER, 3/16 RIVET STNLS      |
| 6      | 15340  | 1   | WASHER, 1/4 STAR STNLS        |
| 5      | 12393  | 2   | RIVET, #64 AAP POP            |
| 4      | 13440  | 1   | NUT, 1/4-20 WING TYPE A STNLS |
| 3      | 15469  | 1   | NUT, 1/4-20 STNLS             |
| 2      | 16644  | 1   | BRACKET, SLIMMATE II MOUNTING |
| 1      | 13439  | 1   | BOLT, 1/4-20 X 1 ELEVTR STNLS |
| ITEM # | PART # | QTY | DESCRIPTION                   |

**TOOLS:** \*Elect/Cordless Drill \*1/4 Drill Bit \*5/16 Drill Bit \*1-1/8 Hole Saw/Drill Bit \*Pencil \*Adjustable Wrench



- 1. If Installing in Global Toilet:** Mounting hole needs to be moved and re-drilled. (See figure #1)
- 2. Bracket Mounting:** Rivet metal bracket to back of pump plate using (2) Rivets and (2) washers. (See figure #2)

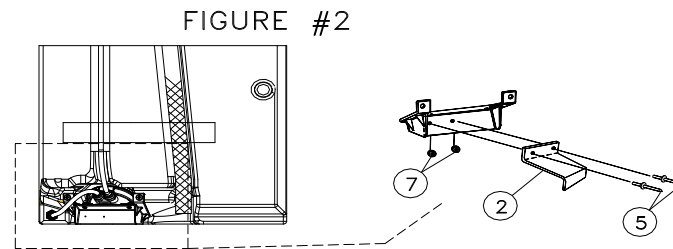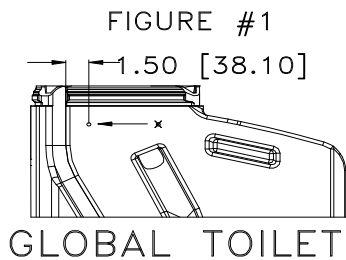

- 3. Set the Slimmate II in the Proper Location:** (See figure #3) Slide metal bracket between the panel and base. Remove the Basin and mark the panel through the top predrilled hole, remove Slimmate and drill with 1/4 drill bit. (See figure #4)

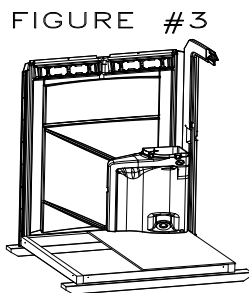

- 4. Drain hose location:** Drill 1-1/8" hole through the front right corner of the tank. Use dimple if tank has one. (See figure #5)
  - MX2 EW:** Attach the king nipple to the threaded fitting on waste tank floor. Attach the drain hose to the king nipple with a #12 hose clamp. Slide bracket between tank and panel wall.
- 5. Fastening Slimmate to Panel:** Place Slimmate back in to the proper mounting location and fasten Slimmate to panel. (See figure #6) **NOTE:** (It is very important that all hoses are in their appropriate relief channels.)
- 6. Place Slimmate drain hose into waste tank. Fasten Basin back onto the Slimmate.**

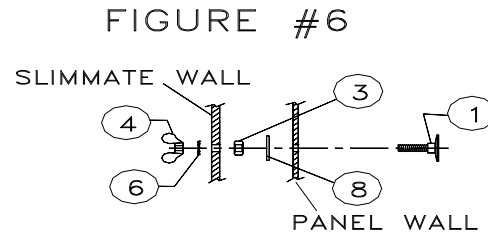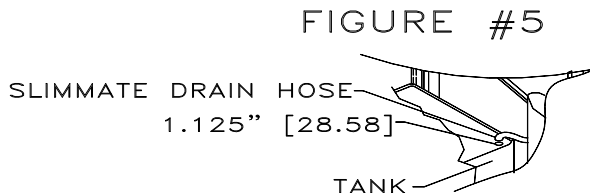

2530 Xenium Lane North, Minneapolis, MN 55441  
 Telephone: 763-553-1900 Fax: 763-553-1905  
 800-328-3332 web: [www.satelliteindustries.com](http://www.satelliteindustries.com)